

HOW TO INSTALL YOUR POLY LAST™ PICKER DOOR FOR: JOHN DEERE 9960 & 9965 IN-LINE

CONGRATULATIONS - You have purchased the most advanced poly cotton picker door cover on the agricultural market today. Proper installation will insure you complete satisfaction.


PLEASE READ ENTIRE INSTRUCTION SHEET BEFORE STARTING

INSTALLING POLY LAST™ PICKER DOORS

1. Remove picker doors to be replaced as directed in your Deere service/operators manual.
2. Remove optional scrapper plates from old doors if your picker is equipped with them. (You may reinstall them over the Poly Last™ doors and adjust to accommodate 1/4" cover.)
3. Remove spring loaded pin assembly for use with Poly Last™ picker doors.
4. Install scrapper plates if desired.
5. Use spring loaded pin assembly to re-install the Poly Last™ doors per your John Deere service manual. Take care not to damage Poly Last™ covers on spindles.

You now have 1/4" less clearance than before. Proper adjustment must be made before operating your picker.

6. If you purchased Poly Last™ 1/8" Poly extensions they may be installed in place of original extensions, no special steps are needed.

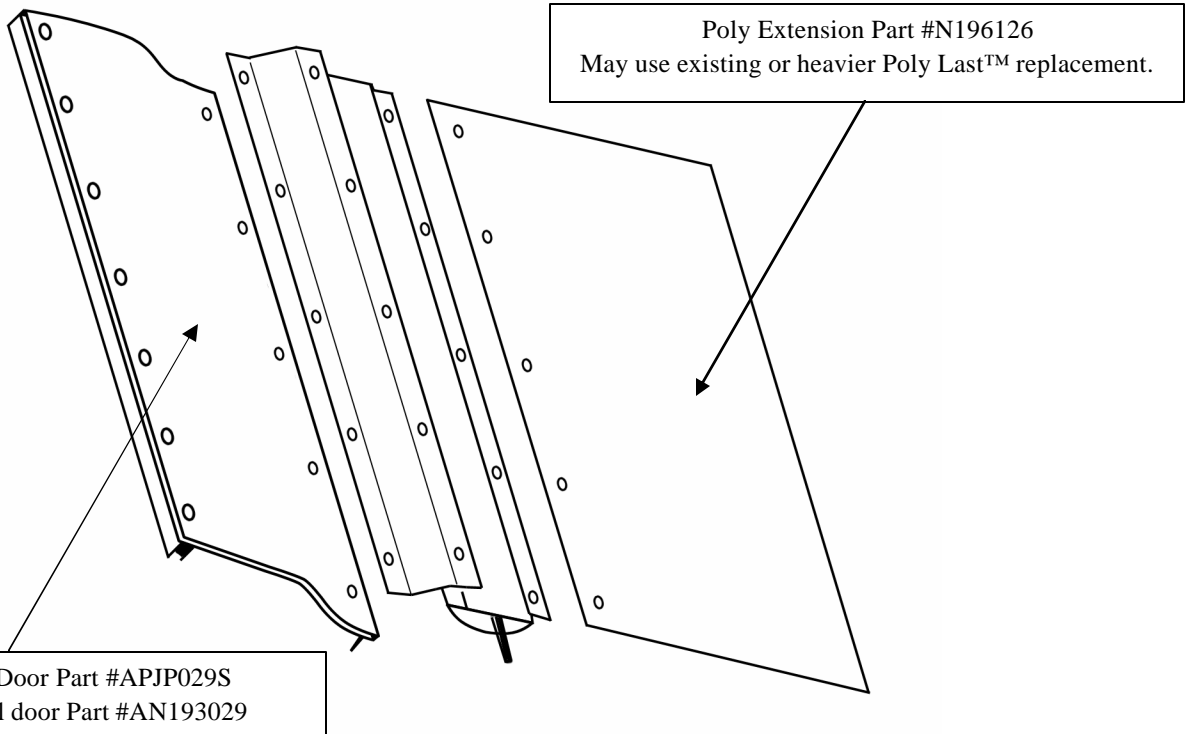

Thank you for choosing another fine Poly Last™ product.
Any questions - Call Poly Tech Customer service at 1-(800) 448-7659

IJDCPIL17AUG04