

www.polyskid.com

P.O. Drawer 349, Monticello, GA. 31064

Order: 800-542-7659

Phone: 706-468-2801

Fax: 706-468-2881

E-Mail: polytech@polyskid.com


Retractable Poly Fingers

Case 1020

PLEASE READ ENTIRE INSTRUCTION SHEET BEFORE STARTING

INSTALLATION INSTRUCTIONS

1. Remove the bolt and retaining pin from the existing finger bearing, then remove finger.
2. Inspect the bearing for wear or damage. Remove any existing burrs.
3. Remove existing finger guide. Clean and remove any burrs and install the Poly Tech finger guide inside of the drum
4. Align the poly finger with mounting hole; install the bolt and retaining pin to secure the finger in position.
5. When finger is retracted to the maximum it should be flush with the end of the finger guide. Also, recheck the clearance between extended finger and the auger floor before operating.

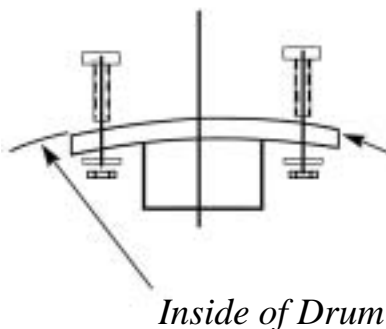

<i>Finger Guide</i>	#21018
<i>Bolt (1/4" x 1" Lg)</i>	#00060
<i>Washer(1/2" OD x 1/4" ID)</i>	#00244
<i>Nut (1/4")</i>	#00205
<i>Poly Finger</i>	#40601

CAUTION: ENLARGING THE MOUNTING HOLE WILL WEAKEN THE FINGER.