




Retractable Poly Fingers

Universal Instruction Sheet

PLEASE READ ENTIRE INSTRUCTION SHEET BEFORE STARTING

MODEL	OVERALL LENGTH	PART#
CASE 1020	8.87"	40601
CNH 2020	10.63"	41488
NH973 / AGCO*	10.25"	40822
JOHN DEERE 600	11.25"	41489
GUIDE	N/A	22175

* - AGCO FINGER REQUIRES ADAPTER P/N: #41602
(INCLUDES 1 ADAPTER AND 1 CLIP) + FINGER P/N 40822
AGCO = GLEANER/ALLIS 500/800 SERIES

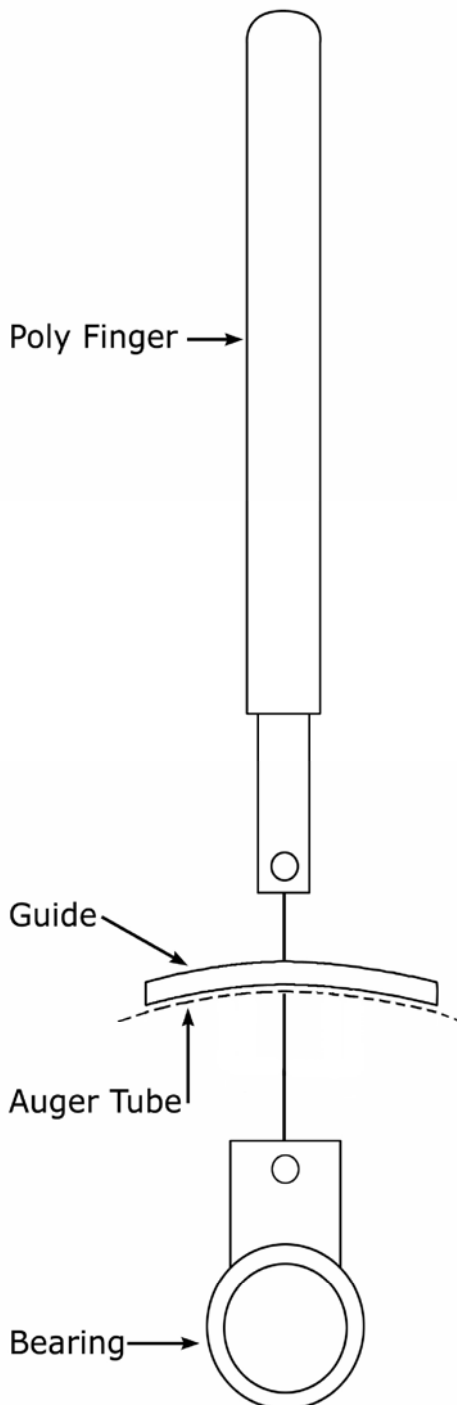

INSTALLATION INSTRUCTIONS

1. Remove the bolt or retaining pin securing finger to bearing inside auger then remove finger.
2. Inspect bearing for wear or damage. Repair or replace if needed.
- 2A. AGCO Fingers ONLY – Attach finger adapter and secure with cap
3. Remove existing finger guide. Remove any burrs from the opening in the auger tube.
4. Install poly finger guide on either the inside or outside of the auger tube depending on the model of your combine. Secure using supplied hardware.
5. Align the poly finger with mounting hole; install the bolt or retaining pin to secure the finger in position.
- 5A. AGCO Fingers ONLY – Apply Loctite to adapter of assembled finger and tighten

Important Note

When finger is fully retracted it should be flush with finger guide surface. Also check clearance between extended finger and auger floor before operating.